


MINIFONE PROGRAMMING INSTRUCTIONS


To programme your Minifone and enter or change the telephone numbers you wish to be called in an emergency, *follow the procedure detailed below:*


1. Connect the Minifone

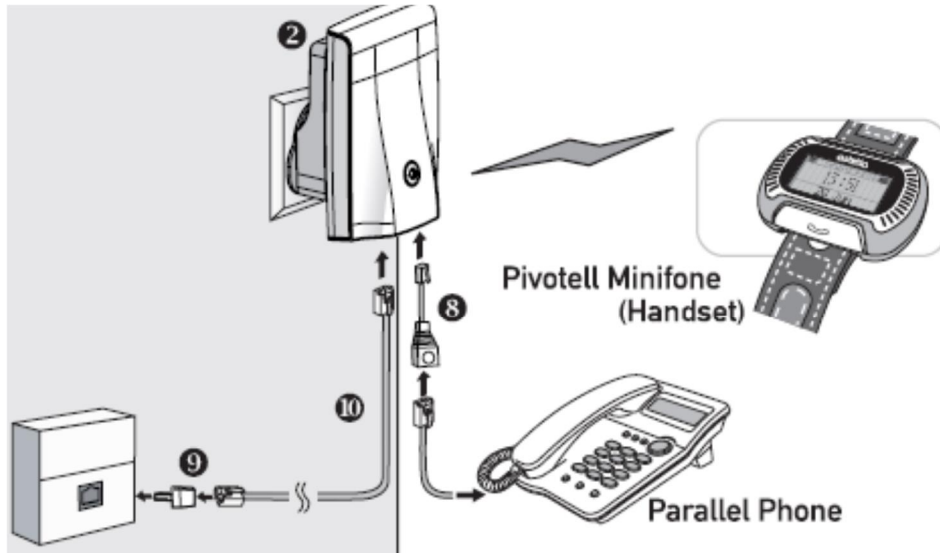

- * Disconnect your existing house phone from the BT wall socket.
- * Connect the base unit ② to the nearest convenient wall power socket and switch on.
- * Connect the BT adaptor ⑨ to the telephone wall socket.
- * Connect the base unit to the BT adaptor using the phone cord supplied. ⑩
- * Connect the house phone to the cable adaptor. ⑧
- * Connect the cable adaptor to the base unit.
- * Connect the charger to any wall power socket and switch on.

Charging the battery

- Put the Minifone unit on the charger unit. Make sure that that LED is lit to indicate that charging is in progress. The charging icon  also appears on the screen of the Minifone. While charging, the bars in the icon will scroll across. When the Minifone is fully charged all of the bars of the battery icon will be shown.

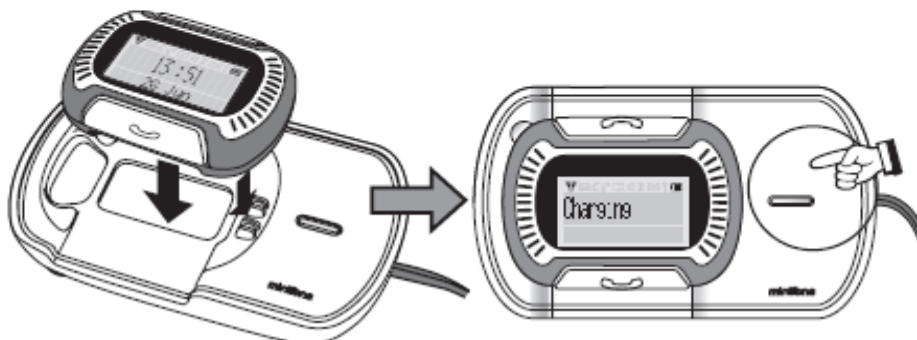

Note – on initial charging it may take a few minutes for the screen to activate.

2. Programming

a. Before starting

The Minifone base unit and your normal house cordless or corded telephone should be connected to the base station (as in 1 above).

- The Minifone should be on its charging cradle and charged
- The Minifone display should be illuminated
- The Minifone should display 'Charging' or 'Fully Charged'
If the display shows 'Out of range' or 'No Dial Tone' an incorrect connection has been made.
- A cordless, corded (analogue) or mobile phone with a dial tone should be used for programming.

b. Put the Minifone into programming mode

- Using an analogue or mobile phone (Phone 1), dial the telephone number to which the Minifone is connected.
- Pick up the normal home phone (Phone 2) attached to the Minifone base unit
- Pick up the Minifone and then put back on its cradle (it will 'beep'); press both keys together until 'Programming' is displayed.
- Press * on Phone 1 – 'Manual Programmation' will be displayed on the Minifone, then 'Number 1'

c. Recording emergency numbers of relatives, friends or neighbours

- Enter the first number by dialling the appropriate numbers on Phone 1 – e.g. 01799 550979
- To validate this number, press **. To cancel a number press #.
- Number 2 will then be displayed.
- Follow the same procedure for the second and then the third number.
- If you do not wish to enter the second or third number press * to skip a record.
- Press *##* to terminate. The Minifone will display '**Configured**' - '**In Service**' and then '**Minifone**'.
- It is then activated and in service.

3.

Main functions:

1. To make an emergency call - press both buttons for 2 seconds



When the Minifone makes a call to one of the three emergency numbers, a voice message is heard by the call receiver 'Hello, this is Minifone, please press 5 to accept the call'. The call receiver should press 5 on their phone keypad to accept the call. If the call receiver does not press 5 on their phone the Minifone will automatically move to the next number.

2. To pick up an incoming call - press any key.



Note: both the Minifone and your normal house phone will ring when an incoming call is received.

3. To terminate a call – press both buttons for two seconds



Frequently asked questions

- **I don't have the time displayed on my Minifone – why?**


The time will be displayed on your Minifone if you subscribe to a Caller Display Service from your telephone service provider. This will be automatically updated each time you receive a call.

- **The time displayed on my Minifone is not correct – why?**

Your Minifone may lose time over a period if it is not updated by the Caller Display Service (see 1 above). It is recommended that the Minifone is used to answer calls daily (if possible) which will update the time.

- **Does the Minifone recognise an answering machine?**

When the Minifone makes a call to one of the three emergency numbers, a voice message is heard by the call receiver 'Hello, this is Minifone, please press 5 to accept the call'. If the call receiver does not press 5 on their phone the Minifone will automatically move to the next number. An answerphone will not press 5 so the Minifone will move to the next number after approx 30 seconds.

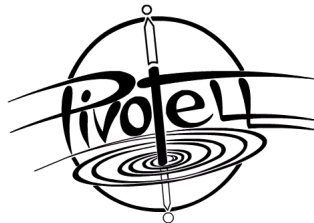

Pivotell Ltd, P.O.Box 108, Saffron Walden, CB11 4WX

Tel: 01799 550979 e-mail: office@pivotell.co.uk

Copyright : Pivotell Ltd